
# RGB RF Controller Installation Instructions



Product Specifications	
Model No.	HV1494-REM
Name	Onder
Material	Plastic
Colour	White + Black
IP Rating	Remote - IP20   Receiver - IP65
Input Voltage	Remote - 3v (CR2025 Battery)   Receiver - 12v DC
Protection Class	3 (Low Voltage - No Earth Required) 🐠
Max Load	3x 2A (72w)
Output Signal	2.4Ghz
Signal Range	Approx 10m
Colour Temp	RGB
Wiring	Parallel
Dimmable	Yes
Warranty	3 Years Replacement*

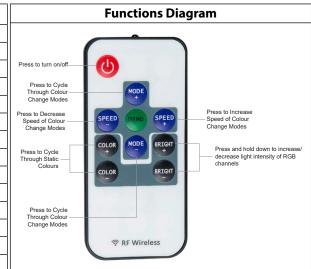

#### **Important Safety Issues:**

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
  - Modification of this product will void any warranty.
- · Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- All electrical connections must be watertight, If a watertight connection is not done, Warranty will be voided.
- Electrical cannot be submersed under water, If connection is under water, Warranty wil be voided.
- · When installing low voltage fittings, Voltage to fitting must be within +or- 5% of voltage required and cannot be installed more than 25m from LED Driver, if not within this allowance warranty will be voided.
- All 316 stainless steel fittings must have regular cleaning maintenance to avoid any tea staining from forming on fitting. (Warranty does not cover Tea Staining).
- All o-rings and seals must be in place correctly to maintain warranty.
- · These instructions may be updated at any time due to product improvements, Please visit website for most current installation instructions.

### **Steps for Installation: Hardwired**

- 1. Make sure that the electrical circuit is free of voltage (master switch off)
- 2. Place fitting in desired location
- 3. Connect the cable -

4.

6.

- Use an appropriate 12v DC LED Driver DO NOT CONNECT LIGHT FITTING DIRECT TO 240V
  - Cut the plug off Controller from the 5-12v Input side.
  - Connect the BLACK cable from controller to Negative cable from LED Driver
  - Connect the RED Cable from controller to Positive cable from LED Driver
- 5. Solder all joins using solder and either a heat gun or butane gas torch.
  - Cover connections using an adhesive lined heat shrink or gel cap to make connection watertight. Failure to do this will void warranty.
- 7. Heat the heat shrink or crimp the gel cap making sure all connections are covered.
- Connect the plug from the Controller into the plug from RGB Pond light (If using with HV1494RGB)
- 9. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

#### Steps for Installation: For use with HV2826-D-12W

- 1. Make sure that the electrical circuit is free of voltage (master switch off)
- 2. Place fitting in desired location
- 3. Plug in 12v DC Side of controller into LED Driver
- 4. Connect Other side of controller into RGB Pond Light. (If using with HV1494RGB)
- 5. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

## Must be installed by a licensed electrician

Contact Details:

143 Beauchamp Road
Matraville NSW 2036
Australia

Tel: 02 9381 8300 Fax: 02 9666 8881 Email: sales@havit.com.au Web: www.havit.com.au

