


# Taper Wall Light Installation Instructions




## Product Specifications

Model No.	HV3602T-BLK	HV3602T-WHT	HV3602T-SS316	HV3602T-CP	HV3605T-BLK	HV3605T-WHT	HV3605T-SS316	HV3605T-CP
Name	Taper							
Material	316 Stainless Steel			Copper	316 Stainless Steel			Copper
Colour	Black	White	Stainless Steel	Copper	Black	White	Stainless Steel	Copper
IP Rating	IP44							
Input Voltage	240v AC				12v DC			
Protection Class	⚡ (Requires Earth)				⚡ (Low Voltage)			
Lamp Base	GU10				MR16			
Lamp Wattage	1x 5w				1x 5w			
Colour Temp	TRI Colour - 3000k, 4000k, 5500k							
Lumens	270lm, 285lm, 300lm							
CRI	>80+							
Wiring	Parallel							
Dimmable	No							
Warranty	3 Years Replacement*							

### Dimensions

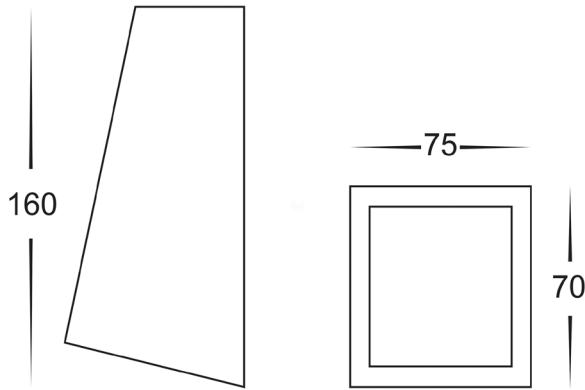

### Mounting Base

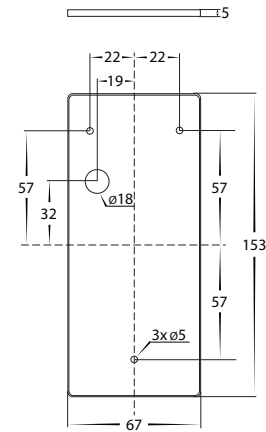

### Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Must not exceed maximum wattage - GU10 35w / G4 20w
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- When installing low voltage fittings, Voltage to fitting must be within +or- 5% of voltage required and cannot be installed more than 25m from LED Driver, if not within this allowance warranty will be voided.
- When installing copper fittings, gloves must be worn to avoid any oils transferring to fitting.
- All 316 & 304 stainless steel fittings must have regular cleaning maintenance to avoid any tea staining from forming on fitting. (Warranty does not cover Tea Staining)
- All o-rings and seals must be in place correctly to maintain warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

### Steps for Installation:

1. Make sure that the electrical circuit is free of voltage (master switch off)
2. Remove the screws from side of fitting and remove cover and set aside
3. Install base plate to wall in desired location
4. Seal all holes including cable entry and mounting holes
5. 240v Models - use wire with earth; connect the earth first, then live and neutral wire
6. 12v DC Models - Using an appropriate 12v DC LED Driver - DO NOT CONNECT LIGHT FITTING DIRECTLY TO 240V
7. Colour temperature is set to 3000K. To change, Remove globe by twisting anti clockwise and select desired colour temperature by moving switch on side of globe and then reinsert globe.
8. Reattach cover to base plate making sure screws are tight to avoid water penetration
9. Apply silicon around edge of fitting to prevent any water from getting inside to electrical connections.
10. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

### Steps for Changing Globe:

1. Remove cover from fitting by removing the 2 screws and removing cover
2. Remove globe by twisting anti clockwise for GU10 and pull for G4 models.
3. Re-insert the appropriate globe by twisting clockwise for GU10 or push gently into the lamp holder. (Make sure not to exceed max wattage, see product label for correct info)
4. Reattach cover to base plate making sure screws are tight to avoid water penetration
5. Apply silicon around edge of fitting to prevent any water from getting inside to electrical connections.

**Must be installed by a licensed electrician**

### Contact Details:

143 Beauchamp Road  
Matraville NSW 2036  
Australia  
Tel: 02 9381 8300  
Fax: 02 9666 8881  
Email: sales@havit.com.au  
Web: www.havit.com.au

### Warranty Terms & Conditions\*



### Additional Information

