



# **EX5S** Touch Panel (RGBWY)




Manual www.havit.com.au

## System Diagram






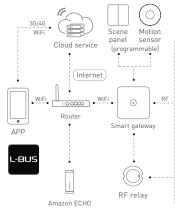

Wired connection Wireless connection

RF to DMX DMX LED driver

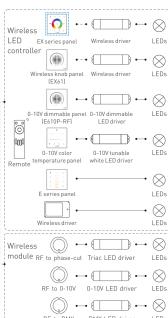

### Product Features



- 2 in 1 control mode: RF and wired DMX512 protocol, more flexible and convenient for project installation.
- Advanced RF wireless sync control technology allows receivers to achieve dimming, color changing and dynamic color changing effects in sync.
- RGB, RGBW, RGB+CT LED lights can be controlled.
- Touch keys with chord and LED indicator.
- Panel adopts capacitive touch control technology, making LED color selections more user-friendly.
- $\bullet$  Touch panel can be controlled by remote directly or smart phone if add a gateway.

## Technical Specs

Model: EX5S Working Temp.: -20°C~55°C

Input Voltage: 100-240Vac Dimensions: 86×86×36mm(L×W×H)

Wireless Type: RF 2.4GHz Package Size: 113×112×50mm(L×W×H)

 
Output Signal: RF 2.4GHz, DMX 512 Weight(G.W.): 225g



 
### Product Size

LTECH

Unit: mm







# **Key Functions**





#### Mode


- 1. Red green jumping
- 2. Green blue jumping
- 3. Red blue jumping
- RGB jumping
  Color jumping
- 5. 7 color jumping
- Red green gradient
   Green blue gradient
- 8. Red blue gradient
- RGB gradient
- 10. 7 color gradient
- \* When blue indicator light of  $\circlearrowleft$  key is on, long press  $\circlearrowleft$  to turn on/off buzzer. When white indicator light of  $\circlearrowleft$  key is on, long press  $\circlearrowleft$  to match code.

## **Terminals**





## Installation Instructions

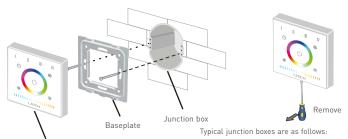

Touch panel



European Style



86 Type

# Application composition



#### DMX512 control



panel driver Lamp

WiFi master controller

Touch panel

DMX driver

Lamp

Remote

Remote

Touch panel

DMX driver Lamp

WiFi master controller

Touch panel

DMX driver Lamp

#### Wireless control



panel driver

Lamp

controller



Remote

Touch panel

Wireless driver

Lamp

WiFi master













Wireless driver


Lamp



## Match code sequence



### DMX system wiring

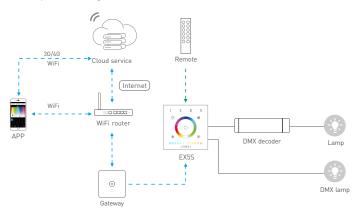


#### Match Code Sequence

- 1. Pair a gateway with the panel, which enables the smart phone to control DMX devices via gateway.
- 2. Pair a remote with the panel, which enables the remote to control DMX devices.



### Wireless system wiring

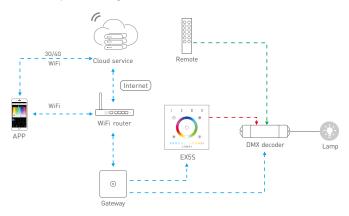


### Match Code Sequence


- 1. Wireless driver & gateway.
- 2. Panel & gateway.
- 3. Remote & panel , remote & wireless driver.
 
## **DMX Wiring**





## RF Wireless Wiring

 

# DMX Channel Output Sheet

Address	RGBWY (0≤N≤101)							
Туре	1	2	3	4	5	6		510
Zone	R1	G1	B1	W1	Y1	R1		Y1

# Match code between touch panel & wireless driver LTECH

Touch panels can work with wireless driver F5-DMX-4A.

#### Method 1:

- Power off the
   driver
- 2. Long press On/Off key of the panel until all indicator lights flash.



 Power on the driver, the lamps flash slowly, please complete step 4 within 15s.

Wireless driver

4. Short press any key or color circle / slider on the panel, match successfully.



#### Method 2:

- Short press "ID learning button" on wireless driver, the lamp flashes, please complete next step within 15s.
  - ID learning button
    Wireless driver
- 2. Long press On/Off key on panel until all indicator lights flash.



Short press any key or color circle / slider on the panel, match successfully.



\* Please match/clear code when 🖰 indicator light of panel is white.

## Match code between touch panels

 B matches with A, long press () on B until all indicator lights flash.



Touch the slider on A within 15s, when indicator lights of B stop flashing, match successfully.



### Match Code between Touch Panel & Remote LTECH



Long press () on touch panel until all scene's indicator lights flash.



Long press the matching zone's "ON" key on Q5, the indicator light of panel stop flashing, match successfully.



## Match Code between Touch Panel & Gateway

1

Long press ( ) on touch panel until all scene's indicator lights flash.



2

Turn on APP, enter "zone set" interface, click the right top "MATCH" key, then follow the prompts.



### Clear Code



Press the bottom two key on touch panel simultaneously for 5 seconds. the indicator light flashes several times, clear code successfully.

- \* Please match/clear code when panel is on (white indicator light of () key is on).
- \* This manual is subject to changes without further notice. Product functions depend on the goods. Please feel free to contact our official distributors if you have any question.

# Warranty Agreement



Warranty periods from the date of delivery 5 years.

Free repair or replacement services for quality problems are provided within warranty periods.

### Warranty exclusions below:

- Beyond warranty periods.
- Any artificial damage caused by high voltage, overload, or improper operations.
- Products with severe physical damage.
- Damage caused by natural disasters and force majeure.
- Warranty labels and barcodes have been damaged.
- No any contract signed by LTECH.
- Repair or replacement provided is the only remedy for customers. LTECH is not liable for any incidental or consequential damage unless it is within the law.
- LTECH has the right to amend or adjust the terms of this warranty, and release in written form shall prevail.

