


Toldo Inground Light Installation Instructions




Product Specifications			
Model No.	HV1827T	HV1828T	HV1829T
Name	Toldo		
Material	316 Stainless Steel cover + Aluminium body		
Colour	Cover - Stainless Steel Body - Black		
Trafficable	Yes - 1000kg		
Installation Type	Ground - Recessed		
IP Rating	IP67		
IK Rating	IK10	IK10	IK10
Input Voltage	12v DC Constant Voltage - External Power Supply Required	12v DC Constant Voltage - External Power Supply Required	24v DC Constant Voltage - External Power Supply Required
Protection Class	3 (Low Voltage - No Earth Required) 🐠	3 (Low Voltage - No Earth Required) 🐠	3 (Low Voltage - No Earth Required) 🏟
Lamp Base	Built In LED	Built In LED	Built In LED
Lamp Wattage	1x 3w	1x 5w	1x 20w
Colour Temp	Tri Colour- 3000k, 4000k, 5500k	Tri Colour- 3000k, 4000k, 5500k	Tri Colour- 3000k, 4000k, 5500k
Lumens	270lm, 285lm, 300lm	450lm, 475lm, 500lm	1600lm, 1700lm, 1800lm
CRI	>80		
Wiring	Parallel		
Dimmable	No		
Warranty	3 Years Replacement*		

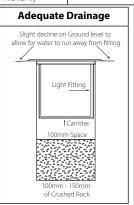

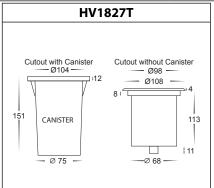

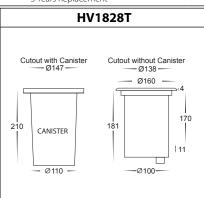

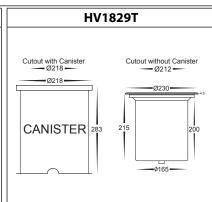

Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- · Modification of this product will void any warranty.
- · Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- When installing low voltage fittings, Voltage to fitting must be within +or- 5% of voltage required, if not within this allowance warranty will be voided.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- All 316 stainless steel fittings must have regular cleaning maintenance to avoid any tea staining from forming on fitting. (Warranty does not cover Tea Staining)
- All o-rings and seals must be in place correctly to maintain warranty
- When installing inground light fittings, Adequate drainage must be allowed to prevent fittings from sitting in water for a long period of time, if no drainage is allowed, Warranty will be voided. (See sample adequate drainage diagram for correct installation method.)
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

Steps for Installation:

- 1. Make sure that the electrical circuit is free of voltage (master switch off)
- 2. Make a hole where fitting is to be placed using dimensions provided on line drawings, making sure adequate drainage is allowed.
- 3. Insert canister, and ensure that the top is level with ground or floor. Failure to do so will void warranty
- 4. Using an appropriate 12v DC Constant Voltage LED Driver (24v DC Driver for HV1829 Models) DO NOT CONNECT LIGHT FITTING DIRECTLY TO 240V
- 5. Connect the cable If more than one fitting installed, wiring must be done in parallel.
- 6. Strip back the cable on both fitting and cable run and twist the positive cables together. Then connect neutral cables together
- Solder all joins using solder and either a heat gun or butane gas torch.
- 8. Cover connections using an adhesive lined heat shrink or gel cap to make connection watertight. Failure to do this will void warranty.
- 9. Heat the heat shrink or crimp the gel cap making sure all connections are covered.
- 10. To adjust tilt, remove nuts on back of fitting and set aside, Remove cover and glass.
- 11. Adjust fitting to desired angle by pushing gently on either side until you reach desired angle.
- 12. Reinsert glass and cover.
- 13. Reattach the 4x nuts and tighten making sure the seals are still in place and screws are tight to avoid any water penetration.
- 14. Colour Temperature is set to 3000k, To adjust remove cap on bottom of fitting and set aside, Slide switch to desired colour and reattach cap making sure its tight
- 15. Tighten cable gland on bottom of fitting before inserting fitting into canister
- 16. Insert fitting into canister. Apply silicon around edge of fitting to prevent any water from getting inside to electrical connections.
- 17. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Must be installed by a licensed electrician

Contact Details:

143 Beauchamp Road
Matraville NSW 2036
Australia

Web: www.havit.com.au
Web: www.havit.com.au

Web. www.havit.com.au